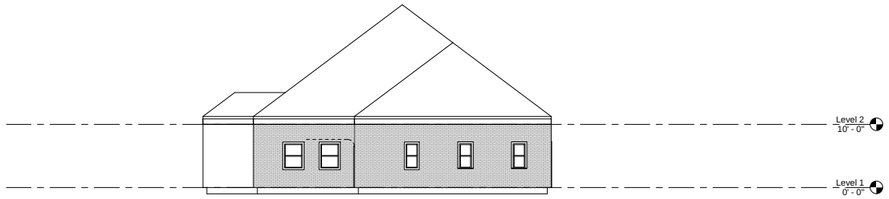

2 East
1/8" = 1'-0"

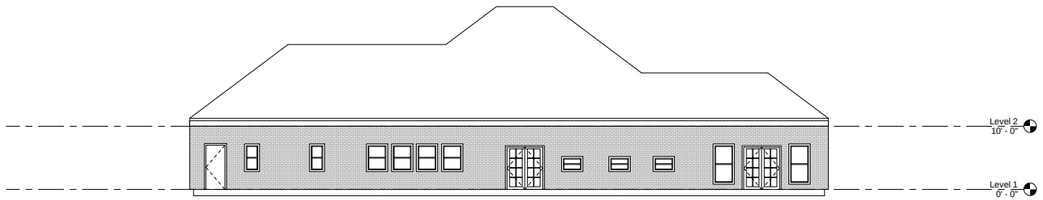

3 North
1/8" = 1'-0"

4 South
1/8" = 1'-0"

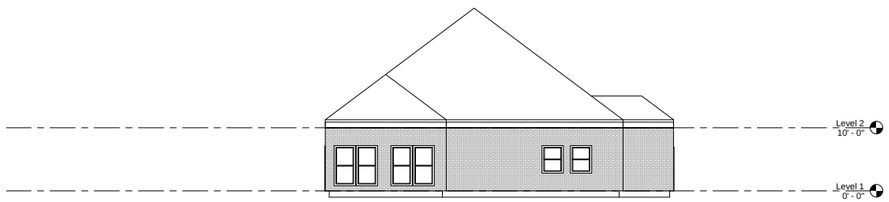

5 West
1/8" = 1'-0"

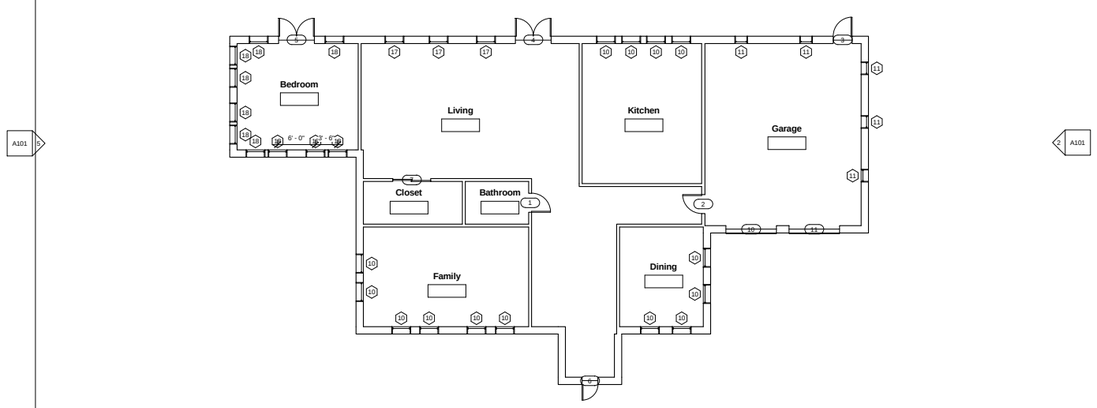

1 Level 1
1/8" = 1'-0"

6 3D View 2

Door Schedule						
Assembly Code	Count	Description	Fire Rating	Height	Width	Mark
C1020	1			7' - 0"	3' - 0"	1
C1020	1			7' - 0"	3' - 0"	2
C1020	1			7' - 0"	3' - 0"	3
C1020	1			6' - 8"	5' - 8"	4
C1020	1			6' - 8"	5' - 8"	5
C1020	1			6' - 8"	2' - 6"	6
C1020	1			6' - 8"	6' - 0"	7
B2030410	1			6' - 6"	8' - 0"	10
B2030410	1			6' - 6"	8' - 0"	11

Window Schedule					
Assembly Code	Count	Description	Mark	Height	Width
B2020100	1		6	4' - 0"	3' - 0"
B2020100	1		7	4' - 0"	3' - 0"
B2020100	1		8	4' - 0"	3' - 0"
B2020100	1		9	4' - 0"	3' - 0"
B2020100	1		10	4' - 0"	3' - 0"
B2020100	1		11	4' - 0"	3' - 0"
B2020100	1		15	6' - 0"	3' - 0"
B2020100	1		16	6' - 0"	3' - 0"
B2020100	1		17	6' - 0"	3' - 0"
B2020100	1		18	6' - 0"	3' - 0"
B2020100	1		19	6' - 0"	3' - 0"
B2020100	1		20	6' - 0"	3' - 0"
B2020100	1		21	6' - 0"	3' - 0"
B2020100	1		22	6' - 0"	3' - 0"
B2020100	1		23	6' - 0"	3' - 0"
B2020100	1		24	6' - 0"	3' - 0"
B2020100	1		25	2' - 0"	3' - 0"
B2020100	1		26	2' - 0"	3' - 0"
B2020100	1		27	2' - 0"	3' - 0"
B2020100	1		28	4' - 0"	3' - 0"
B2020100	1		29	4' - 0"	3' - 0"
B2020100	1		30	4' - 0"	3' - 0"
B2020100	1		31	4' - 0"	3' - 0"
B2020100	1		32	4' - 0"	2' - 0"
B2020100	1		34	4' - 0"	2' - 0"
B2020100	1		35	4' - 0"	2' - 0"
B2020100	1		36	4' - 0"	2' - 0"
B2020100	1		37	4' - 0"	2' - 0"
B2020100	1		38	4' - 0"	3' - 0"
B2020100	1		39	4' - 0"	3' - 0"
B2020100	1		40	4' - 0"	3' - 0"
B2020100	1		41	4' - 0"	3' - 0"

Autodesk® Revit®

www.autodesk.com/revit

Consultant
Address
Address
Address
Phone

Consultant
Address
Address
Address
Phone

Consultant
Address
Address
Address
Phone

Consultant
Address
Address
Address
Phone

Consultant
Address
Address
Address
Phone

No.	Description	Date

Drexel University

AE790

Assignment 3

Project Number	A3
Date	04-21-08
Drawn By	Grant
Checked By	Gochenauer

A101

Scale 1/8" = 1'-0"

4/30/2008 3:00:18 PM